

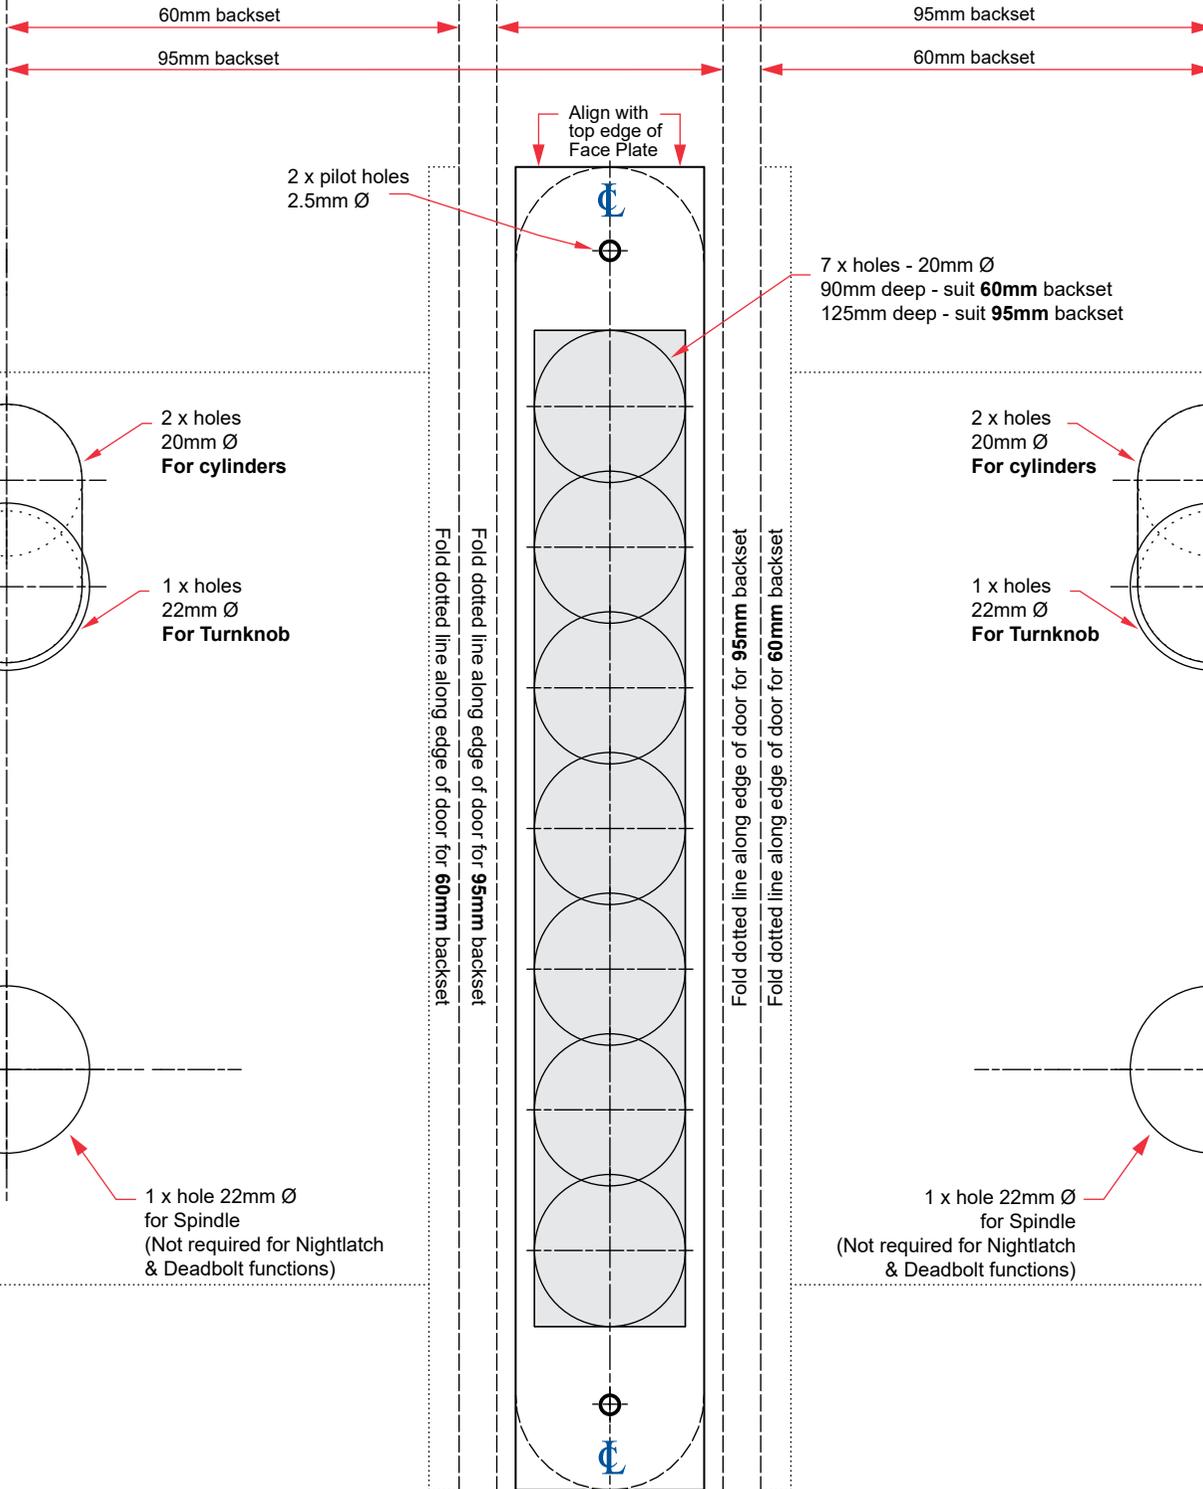


MS2600 & MS2900 Series Mortise Lock Fitting Template

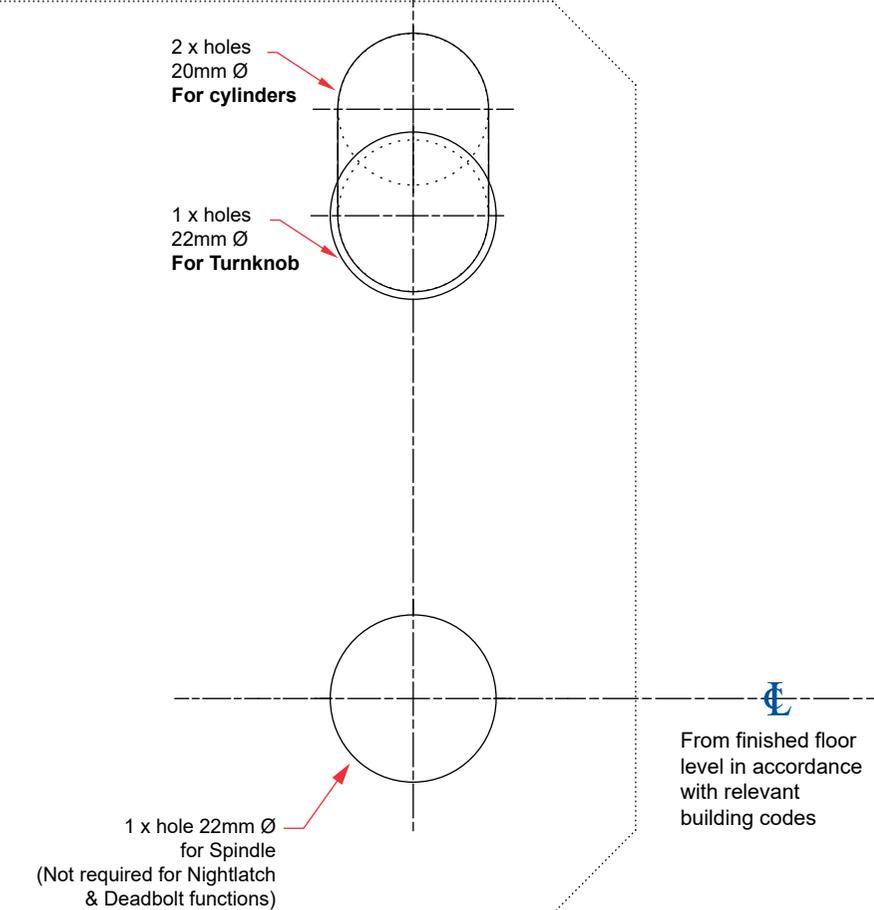

- Warning**
- Only drill the holes that are required to suit the lock function
 - Ensure lock is removed before drilling any holes
 - Drill each hole from both sides of the door to prevent damage
 - Refer door furniture instructions for additional installation details.

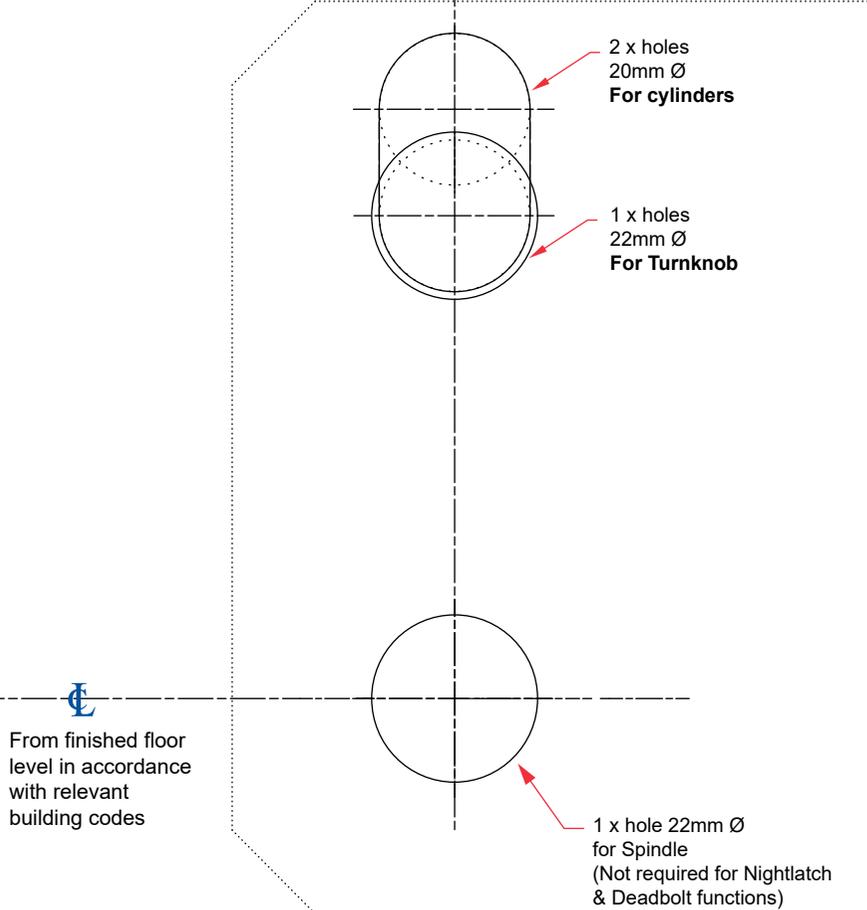

From finished floor level in accordance with relevant building codes

From finished floor level in accordance with relevant building codes